

---

---

### 3. TECHNOLOGIC DATA

(1) T.H.D.:		<0.1%
(2) SIGNAL TO NOISE RATIO:		≧80dB
(3) SEPARATION :		≧60dB
(4) TONE:	10KHz	±10dB
	100Hz	±10dB
(5) INPUT SENSITIVITY:	1KHz	250MV
(6) FREQUENCY RESPONSE:		20Hz-20KHz
(7) OUTPUT POWER:	THD0.1%	4Ω 12W+12W
		8Ω 5W+5W
(8) POWER CONSUMPTION:		50W
(9) VOLTAGE:		AC220V/50Hz

---

---

### E-SA9 STEREO HI - FI AMPLIFIER SYSTEM

### 4 . SAFETY INSTRUCTIONS READ BEFORE OPERATING THE EQUIPMENT

This product was designed and manufactured to meet strict quality and safety standards. There are, however, some installation and operation precautions which you should be particularly aware of.

1. All the safety and operating instructions should be read before the product is operated and should be followed carefully.
2. All warnings in the operating instructions should be followed.
3. The sets should not be used near water - for example, near a bathtub, wash - bowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool, etc.
4. The sets should be placed so that proper ventilation is ensured. For example, it should not be placed on a bed, sofa, rug or similar surface that may block the installation, such as a bookcase or through the ventilation openings.
5. The sets should not be placed close to heat sources such as radiators, stoves, or any other appliance that produces heat.
6. The power cord should be placed so that it is not possible to be walked on or pinched by items placed upon or against it, paying particular attention to the cord at the plug and at the entry to the amplifier.
7. An outdoor antenna should be located away from power lines.
8. The power cord of the amplifier should be unplugged from the outlet when left unused for a long period of time.
9. Care should be taken so that objects do not fall on and liquids are not spilled into the enclosure through openings on top of the housing. Cabinet that may avoid the flow of air.
10. The amplifier should be serviced by qualified service personnel when:
  - A. The power - supply cord or the plug has been damaged; or
  - B. Objects have fallen on, or liquid has spilled into the amplifier; or
  - C. It has been exposed to rain; or
  - D. It does not appear to operate normally or shows a change in performance; or
  - E. It has been dropped, or the housing has been damaged.

---

 
 
---

### OPERATING INSTRUCTIONS

## MAIN SETS AND ACCESSORIES (PLEASE CHECK AND ACCEPT)



AMPLIFIER	1	SET
S8.0 SPEAKER	1	PAIR
SURROUND SPEAKER	1	PAIR
RCA LINE (1 X2& 2X2 EACH)	2	PIECE
1A FUSE	1	PIECE
SPEAKER LINE 2.5MX2	2	PIECE

## 1. CONNECTIONS

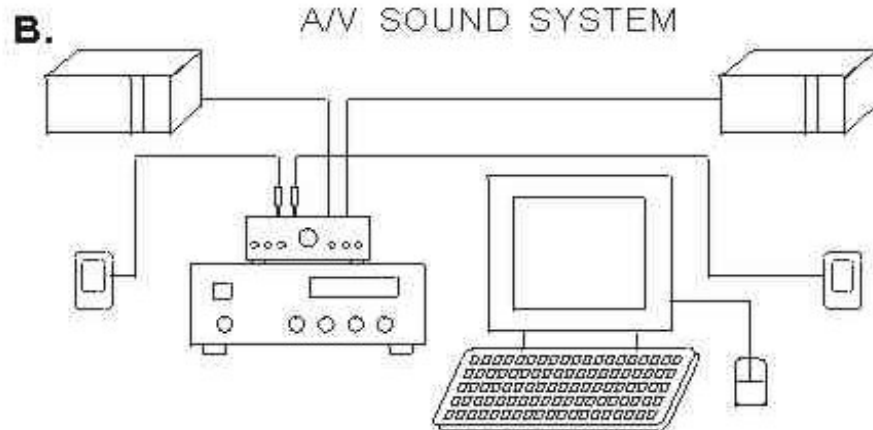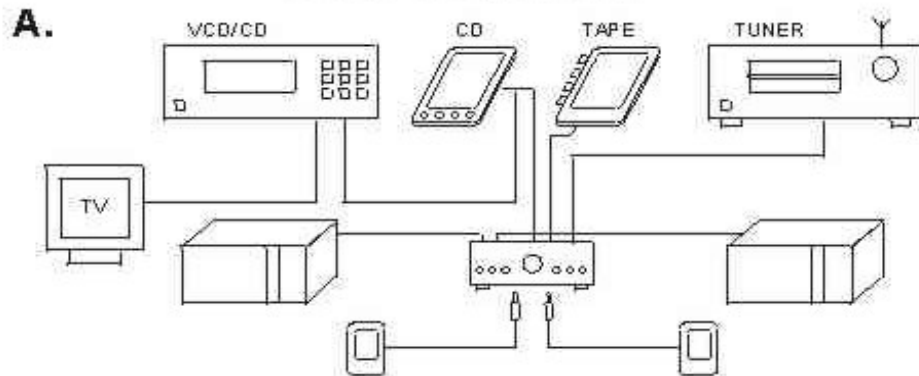

PC SOUND SYSTEM

## 2. FUNCTION CONTROL

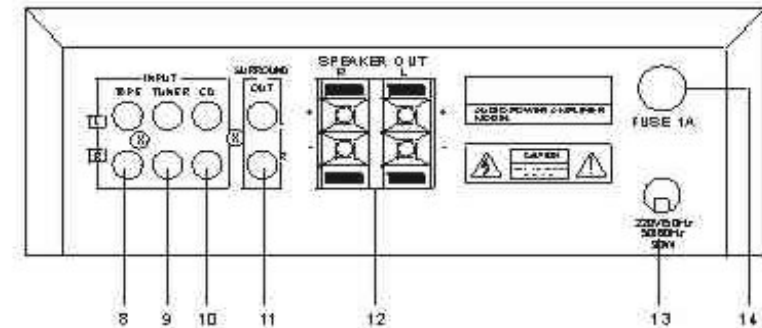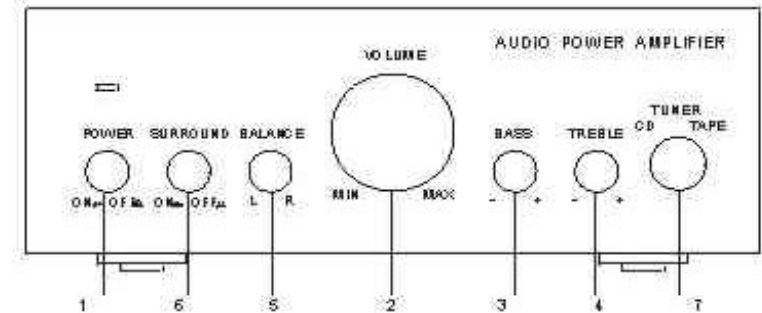  

- (1) POWER SWITCH
- (2) MASTER VOLUME CONTROL
- (3) BASS CONTROL
- (4) TREBLE CONTROL
- (5) BALANCE CONTROL
- (6) SURROUND SWITCH
- (7) TUNER/CD/TAPE INPUT SWITCH
- (8) TAPE INPUT SOCKET
- (9) TUNER INPUT SOCKET
- (10) CD PLAYER INPUT SOCKET
- (11) SURROUND SPEAKER TERMINAL
- (12) MAIN SPEAKER TERMINAL
- (13) 220V/50Hz AC CORD.
- (14) FUSE HOLDER (1A).