

LCD Digital Timer

QUARTZ LCD DIGITAL TIMER WITH ALARM

This digital timer unit with alarm has the ability to count either up or down. On the back of the unit there is a magnetic clip that can also function as a stand. It's great für Cooking Sporting Events/Lab Work/Mock Trials/ Meetings / and anywhere that an accurate timing of events is needed.

INSTRUCTIONS:

Open the battery cover door on the back of the timer unit. Remove the plastic battery saver to activate unit. Digital display will remain on.

COUNT UP

Press START/STOP button to start clocking. Max 99 minutes and 59 seconds.
Press START/STOP button to stop.

RESET TIME

Press and hold Min. button , then Press Sec button to reset.

COUNT DOWN

1. SET TIME

Press Sec button to set the number of seconds required or press and hold button to count up automatically.
Press Min button to set the number of minutes required or press and hold button to count up automatically.

2. START – Press START/STOP button to start timer

When the timer reaches zero, the alarm will sound . Press START/STOP button to stop alarm, otherwise it will sound for 30 seconds. When the alarm stops, the LCD display retains the previous setting. Pressing the START/STOP button starts the timer again for the same increment of time.

Battery Type : 1 x LR44

Dispose of waste electrical and electronic equipment



In order to preserve, protect and improve the quality of environment, protect human health and utilise natural resources prudently and rationally, the user should return unserviceable product to relevant facilities in accordance with statutory regulations. The crossed-out wheeled bin indicates the product needs to be disposed separately and not as municipal waste.

Used batteries disposal



The user is legally obliged (battery regulation) to return used batteries. Disposing used batteries in the household waste is prohibited! Batteries containing hazardous substances are marked with the crossed-out wheeled bin. The symbol indicates that the product is forbidden to be disposed via the domestic refuse. The chemical symbols for the respective hazardous substances are Cd = Cadmium, Hg = Mercury, Pb = Lead. You can return used batteries free of charge to any collecting point of your local authority, our stores or where batteries are sold. Consequently you comply with your legal obligations and contribute to environmental protection!

10102V2110509