

**Franklin**  
www.franklin.com/eu  
TEE-119

# Advanced 6-Language European Translator East

User's Guide

## License Agreement (Applicable outside the EC and Switzerland only)

READ THIS LICENSE AGREEMENT BEFORE USING THE ELECTRONIC REFERENCE. YOUR USE OF THE ELECTRONIC REFERENCE DEEMS THAT YOU ACCEPT THE TERMS OF THIS LICENSE. IF YOU DO NOT AGREE WITH THESE TERMS, YOU MAY RETURN THIS PACKAGE WITH PURCHASE RECEIPT TO THE DEALER FROM WHICH YOU PURCHASED THE ELECTRONIC REFERENCE AND YOUR PURCHASE PRICE WILL BE REFUNDED. ELECTRONIC REFERENCE means the software product and documentation found in this package and FRANKLIN means Franklin Electronic Publishers, Inc.

### Limited Use License

All rights in the ELECTRONIC REFERENCE remain the property of FRANKLIN. Through your purchase, FRANKLIN grants you a personal and nonexclusive license to use this ELECTRONIC REFERENCE. You may not make any copies of the ELECTRONIC REFERENCE or of the data stored therein at the time of purchase, whether in electronic or print format. Such copying would be in violation of applicable copyright laws. Further, you may not modify, adapt, disassemble, decompile, translate, create derivative works of, or in any way reverse engineer the ELECTRONIC REFERENCE. You may not export or reexport, directly or indirectly, the ELECTRONIC REFERENCE without compliance with appropriate governmental regulations. The ELECTRONIC REFERENCE contains Franklin's confidential and proprietary information which you agree to take adequate steps to protect from unauthorized disclosure or use. This license is effective until terminated by Franklin. This license terminates immediately without notice from FRANKLIN if you fail to comply with any provision of this license.

Please read the following safety warnings and precautions before using your device. **Note:** If this device is to be used by young children, this User's Guide should be read to them by an adult and their use of the device should be monitored. Failure to do so may cause injury.

## Introduction

Congratulations on your purchase of the TEE-119, *Advanced 6-Language European Translator East*. The TEE-119 is a terrific resource for translating thousands of words and phrases between English, German, Czech, Hungarian, Polish, and Russian. You can translate words and phrases between any pairing of languages. You can keep track of the time with the home and world clocks. Use the databank to save names and addresses. Use the calculator and metric and currency converters to perform calculations.

Your TEE-119 also contains two word games to help you learn vocabulary.

## Battery Precautions

Your TEE-119 is powered by one CR-2032, 3-volt lithium battery.

- Non-rechargeable batteries are not to be recharged. Never recharge batteries that come with the device.
- Rechargeable batteries are to be removed from the device before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not mix old and new batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- The supply terminals are not to be short-circuited.
- Do not expose batteries to direct heat or try to take batteries apart. Follow the battery manufacturer's instructions for battery use.
- Always remove a weak or dead battery from the device.
- To avoid damage caused by leakage of the battery fluid, replace the battery or batteries once every two years regardless of how much the device has been used during that time.
- Should a battery leak, the device may become damaged. Clean the battery compartment immediately, avoiding contact with your skin.
- Keep batteries out of reach of small children. If swallowed, consult a physician immediately.

## Product Care

Your device is designed to be light, compact and durable. However, it is an electronic device and must be treated carefully. Putting unnecessary pressure on it or striking the device against other objects can cause damage.

In order to avoid damage to your device, please:

- Keep the lid closed when you are not using it. This will protect the screen from being broken, scratched or marred in any way.
- Do not drop, crush, bend, or apply excessive force to the device.
- Do not expose your device to moisture, extreme or prolonged heat, cold, humidity, or other adverse conditions. Avoid storing it in damp, humid or wet places. It is not waterproof.
- Clean the device by spraying a mild glass cleaner onto a cloth and wipe its surface. Do not spray liquids directly on your device.
- Should the device's display glass break, properly dispose of the product avoiding contact with your skin, then wash your hands immediately.
- Please keep screen protectors and plastic bags away from babies and children to avoid danger of suffocation.

## Key Guide

### Function Keys

- word** Goes to the word entry screen to translate words.
- phrase** Goes to the phrases menu.
- lang** Toggles between the two currently selected input and translation languages.
- org** Goes to the Organizer menu, where you can access the clock, databank, calculator, and converter.
- games** Goes to the Games menu.
- power** Turns the product on or off.
- back** Goes back or erases a typed character.
- setup** Goes to the Settings menu, where you can adjust the contrast, the shutoff time, the input and translation languages, the message language, and view the demo.
- clear** Clears the search or stops the demo. Goes to the word entry screen. Clears the calculator. Returns to the top of the Databank or Conversions menu.
- space** Types a space. After a space, press **▲** or **▼** to cycle through the available symbols: ' - .
- enter** Enters a word. In the calculator performs a calculation.

### Navigation Key

- Press the right (**▶**) or left (**◀**) part of the button to move the cursor or scroll right or left. In a conversion screen, press **◀** or **▶** to change the direction of the conversion. Press the up (**▲**) or down (**▼**) part of the button to scroll up or down. At the word entry screen type a letter, then press **▲** or **▼** to cycle through the available capital, lowercase and accented forms of the letter.

### Calculator Keys

- Q-P** Type numbers.
- A(1/x)** Calculates a reciprocal.
- S(√x)** Calculates a square root.
- D(x<sup>2</sup>)** Squares a number.
- F(%)** Calculates a percentage.
- G(.)** Types a decimal point.
- H(+)** Adds two values.
- J(-)** Subtracts one value from another.
- K(x)** Multiplies two values.
- L(÷)** Divides one value from another.
- Z(+/-)** Changes the number on the screen to a negative or positive number.
- X(MC)** Clears the memory.
- C(MR)** Recalls the number stored in memory.
- V(M-)** Subtracts the number from the number stored in memory.
- B(M+)** Adds a number to memory.

## For Your Information

### ✓ Viewing a Demonstration

You can view a demonstration of this product to familiarize yourself with its features. Press **SETUP**, use **▼** until you see *Demo* and press **ENTER**. Press **CLEAR** at any time to stop the demonstration.

### ✓ Follow the Arrows

The flashing arrows at the right of the screen show which direction keys you can press to view more words.

### ✓ Adjusting the Screen Contrast

Press **SETUP**. *Contrast* is on the screen. Press **ENTER** to select it. Press **▲** or **▼** to lighten or darken the screen contrast.

### ✓ Auto-Shutoff

Your device will automatically shut off after a few minutes if no key is pressed. You can change how long your device stays on. Press **SETUP**. Press **▼** until you see *Shutoff* and then press **ENTER**. Press **▼** or **▲** until you see the time you want and then press **ENTER** to set it.

## Getting Started

Your TEE-119 is powered by one CR-2032, 3-volt lithium battery. Before using the device, gently pull the battery insulation tab to remove it. Use a paper

clip to gently press the **RESET** button on the back of the device. See "Resetting Your Device" for details. **Warning!** Pressing the reset button with more than light pressure may permanently disable your unit.

## Setting the Message Language

The first time you use this translator you are prompted to select a message language. Message Language is the language of all menu items and messages in your device.

1. Press **ORG**.
2. Press **E** for *English*, **D** for *Deutsch* (German), **M** for *Magyar* (Hungarian), **C** for *Čeština* (Czech), **P** for *Polski* (Polish), or **R** for «Русский» (Russian).

## Changing the Message Language

1. Press **SETUP**.
2. Press **▼** until you see *Message Language* and then press **ENTER**.
3. Press **▲** or **▼** until you see the language you want and then press **ENTER**.

## Changing the Source and Target Languages

1. Press **SETUP**.
2. Press **▼** until you see *Language* and then press **ENTER**. The "From" language flashes. This is the source language for your translations.
3. Press **▶** or **◀** to select the language and then press **ENTER**.
4. Press **▼**. The "To" language flashes. This is the target language for your translations.
5. Press **▶** or **◀** to select the language and then press **ENTER**.

## Replacing the Battery

Your TEE-119 is powered by one CR-2032, 3-volt lithium battery. Replace the battery when you see the low battery indicator. Please have a small screwdriver at hand before you follow the steps below.

**Warning!** If the battery wears out completely, or if you take more than a few seconds while changing the battery, any user entered information may be erased. You should always keep written copies of your important information.

1. Turn the unit off and turn it over.
2. Use the screwdriver to unscrew the battery cover screw.
3. Push gently on the tab of the battery cover to remove it.
4. Remove the old battery. **Note:** Use a paper clip, if necessary, to remove the old battery.
5. Install 1 new CR-2032 lithium battery with positive polarity facing up. **Important:** Be sure that the battery is installed correctly. Wrong polarity may damage the unit.
6. Replace the battery cover and secure it with the screw.

## Setting the Clock

This product features a home time clock and a world time clock. After you set your home time you can view local times around the world.

## Setting Home Time

1. Press **ORG**.
2. *Clock* is displayed. Press **ENTER** to select it. The home time clock is displayed. The home time clock is differentiated from the world time clock by an asterisk (\*) next to the city abbreviation. Press **ENTER** to toggle between the home time and world time clocks.
3. Press **S** to enter setting mode.
4. *Time format* is displayed. Press **ENTER** to select it. Press **▼** or **▲** to cycle through the 12- and 24-hour *Day/Month/Year* formats. Press **ENTER** to save your selection.
5. Press **▼** until you see *Set DST* and then press **ENTER**. Press **▼** or **▲** to choose *On* or *Off*. Press **ENTER** to select it. **Note:** "DST" stands for Daylight Saving Time.
6. Press **▼** until you see *Set time* and then press **ENTER**. Press **▼** or **▲** until the current hour is displayed. Press **▶** to move to minutes, then press **▼** or **▲** until the current minute is displayed. Press **ENTER** to set the time.
7. Press **▼** until you see *Set date* and then press **ENTER**. Use **▶** and **◀** to move to the next or previous field. Use **▼** and **▲** to scroll to the current day/month/year. Press **ENTER** to set the date.
8. Press **▼** until you see *Set city* and then press **ENTER**. Press **▼** or **▲** until your local city is displayed. Press **ENTER** to select it. **Note:** To see a list of available cities, see the appendix at the end of this User's Guide.
9. Press **BACK** to exit setting mode.

## Setting World Time

1. Press **ORG**.
2. *Clock* is displayed. Press **ENTER** to select it. You see the home time clock.

3. Press **ENTER** to see the world time clock. The absence of an asterisk (\*) indicates World time.
4. Press **S** to enter setting mode.
5. *Set DST* is displayed. Press **ENTER** to select it. Press **▼** or **▲** to choose *On* or *Off*. Press **ENTER** to select it.
6. Press **▼** until you see *World City* and then press **ENTER**. Press **▼** or **▲** until the city you want is displayed. Press **ENTER** to select it. **Note:** To see a list of available cities, see the appendix at the end of this User's Guide. **Note:** The list of World Cities and their abbreviations is in English.
7. Press **BACK** to exit setting mode.

## Translating Words

You can use this translator to translate words from a source language to a target language.

1. Press **WORD**. The current source language is displayed. Press **LANG** to toggle between the current source and target language. You can change the source and target languages at any time. Please see "Changing the Source and Target Languages" for more information. Type a word you want to look up. For example, using English as the source language, type the word *train*, then press **ENTER**. "Found: 27" displays, followed by the list of words and/or phrases. Press **▼** or **▲** to select the desired word or phrase, then press **ENTER** to see its translation. To see a word or phrase that does not fit on the screen, press **▶** repeatedly.
2. Press **BACK** to return to the list.
3. Press **CLEAR** for a new search.

### ✓ Typing Special Characters

You can type accent marks, diacritical marks, non-English letters, and capital letters, but they are not needed to find matches. Special characters can be typed by first typing the desired letter and then repeatedly pressing **▼** or **▲** until the desired character is displayed. To type a punctuation mark, press **SPACE** then press **▼** or **▲** repeatedly until the desired character is displayed.

### ✓ Correcting Misspellings

If you misspell a word in any language, or if you enter a word that is not contained in this translator, a list of corrections is displayed. Use **▼** or **▲** to scroll to a correctly spelled word and press **ENTER**.

## Translating Phrases

**Note:** The phrases in this product are listed in the current source language.

1. Press **PHRASE**. Use **▼** or **▲** to scroll to a category. For example, choose *Shopping*. Press **LANG** to toggle the list of categories between the current source and target language. You can change the source and target languages at any time. Please see "Changing the Source and Target Languages" for more information.
2. Press **ENTER**. Use **▼** or **▲** to scroll to a phrase, and press **ENTER** to see its translation. To see a phrase that does not fit on the screen, press **▶** repeatedly.
3. Press **BACK** to return to the list.
4. Press **CLEAR** to return to the category menu.

## Using the Databank

This product has a databank that can save as many as 100 names and phone numbers. The total amount of names and numbers that you can save depends upon the number of characters in each entry.

## Adding Entries to the Phone List

1. Press **ORG**.
2. Press **▼** until you see *Databank* and then press **ENTER**.
3. Press **▼** or **▲**, if necessary, until you see *New Entry* and then press **ENTER**.
4. Type a name and then press **ENTER**. Each name can contain up to 30 characters, including spaces, with letters appearing as capitals. To delete a character, press **BACK**. To type a hyphen, an apostrophe or a period press **SPACE**, then press **▲** repeatedly until the desired character is displayed. **Note:** Accented characters are not supported in the phone list.
5. Use the numbered keys to type a phone number and then press **ENTER**. The number keys are automatically active in the number field. To type a hyphen or period, press **SPACE**, then press **▲** repeatedly until the hyphen or period is displayed. **Note:** You cannot type letters in a phone number.

### ✓ Viewing Your Available Memory

Your device tells you how much memory you have left in the phone list. Press **ORG**, press **▼** until you see *Databank*, press **ENTER** and then press **▼** until you see *Free: XX%* to see how much memory remains.

## Viewing the Phone List

1. Press **ORG**.
2. Press **▼** until you see *Databank* and then press **ENTER**.
3. Press **▼** or **▲**, if necessary, until you see *View List: ...* and then press **ENTER**.
4. To view a name, type it or use **▼** or **▲** to see the name you want.

## Editing Phone List Entries

1. Press **ORG**.
2. Press **▼** until you see *Databank* and then press **ENTER**.
3. Press **▼** or **▲** until you see *Edit Entry* and then press **ENTER**.
4. Type the name you want to edit or use **▼** or **▲** until you see it and then press **ENTER**.  
Edit the name field. Press **◀** or **▶** to move the cursor. You can use **BACK** to delete characters. Press **ENTER** to move to the number field. Edit the number field and press **ENTER** to save your changes.  
To cancel the edit and return to the *Databank* menu without saving changes, press **CLEAR**.

## Keep Copies of Important Data

**Warning!** Your phone list information is safely stored in memory as long as the battery supplies power. However, if the battery loses all power, this information may be permanently lost. Always keep written copies of your important information.

## Deleting Entries from the Phone List

1. Press **ORG**.
2. Press **▼** until you see *Databank* and then press **ENTER**.
3. Press **▼** or **▲** until you see *Delete Entry* and then press **ENTER**.
4. Type the name you want to edit or press **▼** or **▲** until you see the entry you want to delete.
5. Press **ENTER**.
6. Press **Y** to delete the entry or **N** to cancel the deletion.

## Erasing All Entries from the Phone List

**Warning!** This procedure permanently erases all the names and numbers in your phone list.

1. Press **ORG**.
2. Press **▼** until you see *Databank* and then press **ENTER**.
3. Press **▼** or **▲** until you see *Erase All Data* and then press **ENTER**.
4. Press **Y** to erase all the entries or **N** to cancel the operation.

## Using a Password

You can use a password to keep the information in the *databank* private. The password is requested when the unit is turned on and the *databank* is accessed.

## Password Warnings

**Warning!** After you set the password, you must enter the password to access the *databank* for the first time during a session. Always record your password and keep it in a separate place. If you forget the password, you must reset the unit to access the *databank*.  
**Warning!** Resetting the unit erases all user-entered information. Always keep written copies of your data. If you have a reset button, use the end of a straightened paperclip to gently press the reset button. If you do not have a reset button, or if the unit does not reset after pressing the reset button, remove the batteries, wait at least two minutes, and then re-install them. For battery instructions, see "Replacing the Battery".

## Setting the Password

1. Press **ORG**.
2. Press **▼** until you see *Databank* and then press **ENTER**.
3. Press **▼** or **▲** until you see *Set Password* and then press **ENTER**.
4. Type a password and then press **ENTER**. Your password can have up to 8 characters. You are prompted to retype your password.
5. Type your password again exactly as you did the first time.
6. Press **ENTER** to confirm and enable your password.  
To test the password, press **ORG** twice, press **ORG**, press **▼** until you see *Databank* and then press **ENTER**.  
To disable the password, repeat Steps 1-3 above, and press **ENTER** when "Enter new password" displays.

## Using the Calculator

### Making Calculations

1. Press **ORG**.
2. Press **▼** until you see *Calculator* and then press **ENTER**.
3. Type a number.  
You can type up to 10 digits.  
To enter a negative number, use **Z(+/-)**. To type a decimal point, press **G(.)**.
4. Press **H(+)**, **J(-)**, **K(x)**, or **L(÷)** to add, subtract, multiply, or divide.

5. Type another number.
6. Press **ENTER**.  
Or press **F(%)** to calculate the percentage.  
To calculate... Press...  
reciprocals A(1/x)  
square roots S(√x)  
squares D(x²)
7. Press **CLEAR** to clear the calculator.

## Using the Calculator Memory

Try the following equation to practice using the calculator memory:  
 $(32 \times 12) - (8 \times 8) = 320$ .

1. Press **ORG**.
2. Press **▼** until you see *Calculator* and then press **ENTER**.
3. Press **B(MC)** to clear the calculator memory, if necessary.
4. Type **32**, press **K(x)**, type **12** and then press **ENTER**.
5. Press **X(M+)** to add the result to memory. **M** indicates a number is stored in memory.
6. Type **8**, press **K(x)**, type **8** and then press **ENTER**.
7. Press **C(M-)** to subtract the result from memory.
8. Press **V(MR)** to retrieve the number from memory.
9. Press **CLEAR** to clear the current calculations.

## Using the Converter

The converter allows you to easily convert measurements and currency.

### Making Metric Conversions

1. Press **ORG**.
2. Press **▼** until you see *Conversions* and then press **ENTER**.
3. Press **▼** or **▲** until you see the conversion category you want and then press **ENTER**. If there is a sub-menu, repeat Step 3.
4. Type a number.  
Press **BACK** to delete a number.
5. Press **ENTER** to convert it.  
Press **◀** or **▶** to change the units you are converting from and to.
6. Press **CLEAR** when done.

### Making Currency Conversions

1. Press **ORG**.
2. Press **▼** until you see *Conversions* and then press **ENTER**.
3. Press **▼** until you see *Currency* and then press **ENTER**.  
**Note:** The first time you use the currency converter, you must set the exchange rate.
4. Press **▼** until you see *Rate* and then press **ENTER**.
5. Enter an exchange rate.  
The rate should be in units of the other currency per one unit of the home currency (*n* other/1 home). For example, to convert between Euro and British Pounds, enter an exchange rate of 0.698587. This means that 0.698587 British Pounds is the equivalent of 1 Euro.  
Press **BACK** to erase a number. Press **G(.)** to enter a decimal point.
6. Press **ENTER**.  
At any time, select *Rate* from the *Currency* menu to see what the set rate is.
7. Press **▼** or **▲** until you see *Home->Other* and then press **ENTER**.
8. Type the amount for the home or other currency.  
Press **BACK** to erase a number. Press **G(.)** to enter a decimal point.  
Press **◀** or **▶** to change whether you convert to or from your home currency.
9. Press **ENTER** to convert it.
10. Press **CLEAR** when done.

## Playing the Games

### Hangman

*Hangman* selects a mystery word and challenges you to guess it letter by letter.

1. Press **GAMES**.
2. *Hangman* is displayed. Press **ENTER** to select it.
3. Type letters you think are in the mystery word.  
The language of game words is determined by the "From" language in the *Settings* menu. The letters of the mystery word are hidden by question marks. The number to the right of the screen indicates the number of guesses remaining. Press **ENTER** to reveal the word and end the round.
4. After the round is over, press **SPACE** to play a new round.  
Press **ENTER** to search for translations of the word. Press **BACK** to return to the game.

### Quiz

*Quiz* tests your translation skills. **Note:** To change the source and target languages for *Quiz*, you must change them before you play. Please see "Changing the Source and Target Languages".

1. Press **GAMES**.
2. Press **▼** until you see *Quiz* and then press **ENTER**.  
A word from the selected source language is displayed. Read the word and try to guess its translation.
3. Press **ENTER** to see its translation.
4. Press **ENTER** again to start a new round.

## Resetting Your Device

If the keyboard fails to respond, or if the screen performs erratically, perform a system reset by following the steps below.

1. Hold **CLEAR** and press **ORG**.  
If nothing happens, try Step 2.
2. Use a paper clip to gently press the reset button located on the back of the unit.
3. Press **E** to set English message language.  
You can also press **D** for German, **M** for Hungarian, **C** for Czech, **P** for Polish, or **R** for Russian.  
The message "Erase All? Y/N" is displayed.  
**Note:** This message refers to user-entered information, not the text in the translator. User-entered information includes the *databank* and any settings you may have changed.
4. Press **N** to save your information.  
Press **Y** to erase your information.

**Warning!** Pressing the reset button with more than light pressure may permanently disable your unit. In addition, resetting the unit erases settings and information you may have entered.

## Specifications

**Model:** TEE-119 *Advanced 6-Language European Translator East*

**Dimensions:** 10.2 x 7.3 x 1.3 cm  
**Battery:** 1 x CR-2032 3 volt lithium  
**ISBN:** 978-1-59074-439-0

If you have a problem with this product, refer to the limited warranty. If you purchased this product outside the United States, contact the place of purchase to obtain warranty or repair information.

© 2002-2008 Franklin Electronic Publishers, Inc. Burlington, N.J. 08016-4907 U.S.A. All rights reserved.

Imported to the European Community by:  
Franklin Electronic Publishers GmbH  
Kapellenstr. 13  
85622 Feldkirchen, Germany  
U.S. Patents: 4,891,775; 5,113,340; 5,218,536;  
5,396,606.



## Recycling and Disposal

### Device Disposal

This device should be disposed through your local electronic product recycling system – do not throw into the trash bin.

### Packaging Disposal

Please save this User's Guide and all packing materials, as they contain important information. In case of disposal, please refer to your local recycling system.

### Battery Disposal

Do not dispose of batteries with normal household waste. Please obey your local regulations when disposing of used batteries.

This unit may change operating modes, lose information stored in memory, or fail to respond due to electrostatic discharge or electrical fast transients. Normal operation of this unit may be re-established by pressing the reset key, by pressing **ORG** or by removing and replacing the batteries.

## FCC NOTICE

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

**Warning:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**NOTE:** This unit was tested with shielded cables on the peripheral devices. Shielded cables must be used with the unit to insure compliance.

**NOTE:** The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

## Disclaimer of Warranties

Except as specifically provided herein, Franklin makes no warranty of any kind, express or implied, with respect to this product.

For the US Limited Warranty in English visit [www.franklin.com/service](http://www.franklin.com/service).

## Limited Warranty (EU and Switzerland)

Notwithstanding the disclaimer of warranties above, this product, excluding batteries and liquid crystal display (LCD), is guaranteed by Franklin to be free of defects in materials or workmanship for a period of two years from the date of purchase. It will be repaired or replaced with an equivalent product (at Franklin's option) free of charge for any defect in workmanship or materials during that time.

This warranty explicitly excludes defects due to misuse, accidental damage, or wear and tear. This warranty does not affect the consumer's statutory rights.

## Limited Warranty (outside U.S., EU and Switzerland)

Notwithstanding the disclaimer of warranties above, this product, excluding batteries and liquid crystal display (LCD), is guaranteed by Franklin to be free of defects in materials or workmanship for a period of one year from the date of purchase. It will be repaired or replaced with an equivalent product (at Franklin's option) free of charge for any defect in workmanship or materials during that time.

Products purchased outside the United States, the European Union and Switzerland that are returned under warranty should be returned to the original vendor with proof of purchase and description of fault. Charges will be made for all repairs unless valid proof of purchase is provided.

This warranty explicitly excludes defects due to misuse, accidental damage, or wear and tear. This warranty does not affect the consumer's statutory rights.

## Appendix: Cities List

CITY NAME	ABBREVIATION
ADELAIDE	ADL
AUCKLAND	AKL
AMSTERDAM	AMS
ANCHORAGE	ANC
AZORES ISLANDS	AZO
BARCELONA	BCN
BEIJING	BEJ
BERLIN	BER
BANGKOK	BKK
BRUSSELS	BRU
CAIRO	CAI
CARACAS	CCS
CHICAGO	CHI
DHAKA	DAC
DELHI	DEL
DENVER	DEN
DUBAI	DXB
FERNANDO DE NORONHA	FER
GUAM	GUM
HELSINKI	HEL
HONG KONG	HKG
HONOLULU	HNL
KABUL	KBL
KARACHI	KHI
LOS ANGELES	LAX
LISBON	LIS
LONDON	LON
MADRID	MAD
MID ATLANTIC	MAT
MIDWAY ISLANDS	MID
MOSCOW	MOW
NOUMEA	NOU
NEW YORK	NYC
PARIS	PAR
YANGON	RGN
RIO DE JANEIRO	RIO
ROME	ROM
RIYADH	RUH
SINGAPORE	SIN
SYDNEY	SYD
TEHRAN	THR
TONGA	TNG
TOKYO	TYO
WELLINGTON	WLG
TORONTO	YYZ

Technical Support/Ayuda técnica /  
Technische Hilfe/Aiuto tecnico/  
Aide technique/Technische Steun

Deutschland  
Österreich  
Bitte schicken Sie dieses Produkt im Garantiefall mit Kaufbeleg an folgende Service-Adresse: Franklin Electronic Publishers (Deutschland) GmbH, Kapellenstrasse 13, D-85622 Feldkirchen.  
Den technischen Support erreichen Sie unter Tel. +49-89-90899-116. Bestellinformationen erhalten Sie unter Tel. +49-89-908990 oder im Internet unter [www.franklin-net.de](http://www.franklin-net.de)  
Registrieren Sie Ihr Produkt bitte online unter [www.franklin.com/de](http://www.franklin.com/de)

Mexico  
Para Soporte Técnico llamar al tel. 01 800 710 5938

USA & Canada  
Technical Support is open from 9AM to 5PM EST Monday through Friday. Please call (800) 866-2110 and choose option 3, or fax (609) 387-1787 or visit us at [www.franklin.com](http://www.franklin.com)

All other countries  
Todos los otros países  
Alle anderen Länder  
Altri paesi  
Tous les autres pays  
Alle Overige Landen  
Todos os outros países  
Για όλες τις άλλες χώρες  
[www.franklin.com](http://www.franklin.com)