



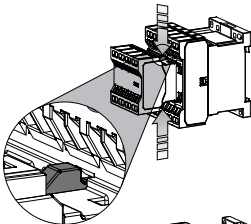





INSTRUÇÃO DE MONTAGEM - BLOCO DE CONTATO FRONTAL PARA CWC0 - TERMINAL MOLA
ASSEMBLY INSTRUCTION - FRONT CONTACT BLOCK FOR CWC0 - SPRING TERMINAL
INSTRUCTIVO DE MONTAJE - BLOQUE DE CONTACTO FRONTAL PARA CWC0 - TERMINAL RESORTE
MONTAGEANLEITUNG - HILFSSCHALTERBLOCK FÜR CWC0 - FEDERZUGKLEMME





A		B	
Auxiliary Contact Block Bloques de Contactos Auxiliares Blocos de Contatos Auxiliares Hilfsschalterblöcke		2 X 0.5...1.5 22 - 16 (mm ² / AWG)	7mm / 0.27" (mm / pol)

