

Bitte lesen Sie die Bedienungsanleitung des Adapters und Ihres Akkus sowie des Ladegerätes vor Gebrauch aufmerksam durch:




## Bedienungsanleitung / Operating Instruction

### AccuPower Lade-Adapter Modell LALADY-1 (Aluminium) von Größe N auf AA

1. Stecken Sie den Size N / Lady / LR1 Akku in den Adapter. Bitte beachten Sie dabei die Polarität des Akkus (+ / -)
2. Setzen Sie nun den Akku inkl. Adapter in das Ladegerät.
3. Bitte prüfen Sie, ob Ihr Ladegerät das Laden von NiCd / NiMH Akkus der Größe N/Lady/LR1 unterstützt. Als dafür ideal geeignete Ladegeräte empfehlen wir AccuPower AccuManager10 AP2010-1 und AccuManager20 AP2020-1

**ACHTUNG:** Überladen Sie die Akkus nicht. Nur für den Innengebrauch vorgesehen. Dieser Ladeadapter kann nur mit Nickel-Cadmium und Nickel-Metall-Hydride Akkus verwendet werden. Durch den Versuch diesen Ladeadapter mit anderen Batterietypen zu verwenden, könnten Personenschäden auftreten und das Ladegerät könnte beschädigt werden. Bitte beachten Sie die Hinweise Ihrer Bedienungsanleitung vom Ladegerät. Leider sind zum Laden der Baugröße N / LR1 / Lady nicht alle Micro-/Mignon oder Universal- Ladegeräte geeignet. Bitte vor dem Laden immer die Richtigkeit der Polaritäten (+ / -) von Akku und Adapter beachten.

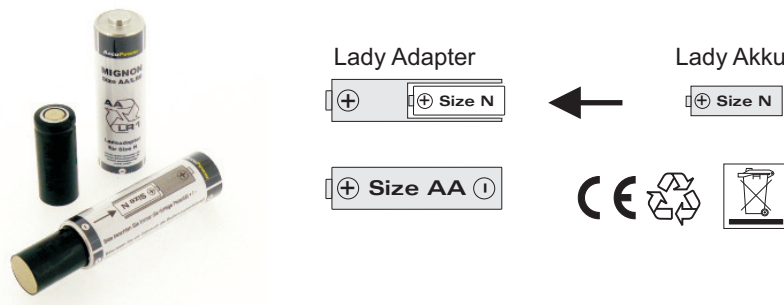

### AccuPower Adaptor Modell LALADY-1 (Aluminium) from Size N to AA

1. Insert 1 piece of Size N / Lady / LR1 Cell in the adaptor. Please check every time the polarity (+ / -) of each cell
2. Plug the rechargeable battery into the adaptor and the suitable charger.
3. Please check first if your charger also is suitable for Size N / Lady / LR1 rechargeable batteries. The ideal chargers are AccuPower AccuManager10 AP2010-1 or AccuManager20 AP2020-1

**CAUTION:** Do not overcharge the rechargeable batteries. For indoor use only. This adaptor is intended for use with Nickel-Cadmium and Nickel-metal-hydride rechargeable batteries only. Attempting to charge other types of batteries may cause personal injury and damage the charger. Please also note the Operating Instruction of your charger. Not all Micro- / Mignon and Universal-chargers are suitable for the size N / LR1 / Lady cells. Please read the Operating instruction from you charger before use. Please check the polarity (+ / -).